

CARS (AMERICAN / IMPORT)

LIGHT TRUCKS / MINIVANS / SUVs

Table of car models and torque specifications for American and imported cars, including brands like ACURA, ALFA ROMEO, ASTON MARTIN, and BUICK.

Table of car models and torque specifications for American and imported cars, including brands like FIAT, FORD, GENESIS, HONDA, and JAGUAR.

Table of car models and torque specifications for American and imported cars, including brands like MITSUBISHI, NISSAN, OLDSMOBILE, PLYMOUTH, and PONTIAC.


Table of car models and torque specifications for American and imported cars, including brands like BENTLEY, BMW, BUICK, CADILLAC, CHEVROLET/GMC, and CHRYSLER.

Table of car models and torque specifications for American and imported cars, including brands like FORD (CONT.), HONDA, HUMMER, HYUNDAI, INEOS, INFINITI, ISUZU, JAGUAR, JEEP, and KIA.

Table of car models and torque specifications for American and imported cars, including brands like MAZDA, MERCEDES-BENZ, MITSUBISHI, NISSAN, PLYMOUTH, PORSCHE, RAM, RIVIAN, ROLLS-ROYCE, SAAB, SATURN, SUBARU, SUZUKI, TESLA, TOYOTA, and VOLKSWAGEN.

CRISS CROSS GUIDE

ONLY TIGHTEN THE NUTS FOLLOWING THE GUIDE SHOWN. FAILURE TO TIGHTEN NUTS IN THE CRISS-CROSS SEQUENCE WILL CAUSE MISALIGNMENT OF THE WHEEL. CONTINUE THIS PROCESS UNTIL ALL OF THE NUTS ARE TIGHTENED TO THE PROPER SPECIFICATIONS.

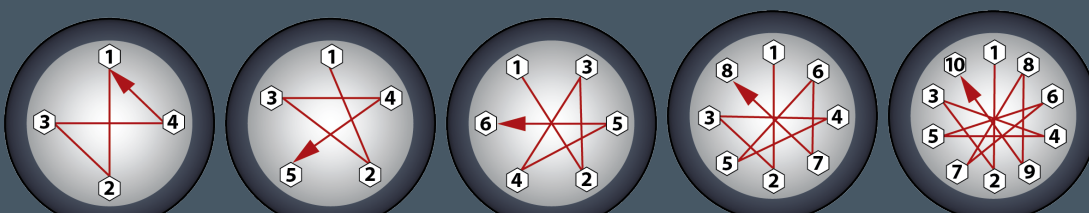

1/2" DRIVE TORQUE LIMITING SOCKETS

Table mapping part numbers, sizes, and colors to torque specifications for 1/2 inch drive torque limiting sockets.

WARNINGS

- List of warnings including: Only those instructed in the safe and proper use of Torque Sockets and Extension Bars should use them; Actual line pressure should be 90 to 100 psi; Always wear safety goggles when using torque sockets and extension bars; Never hold with hands while tightening; Do not lubricate lug nuts before torquing; Inproper torque can cause distortion, alignment problems and fatigue cracks.